

**DIRECTIONS FOR USING THE
ROEHRIG AMPLIFIER**

When attaching—if you find the brass threads in the telephone tight or slightly corroded, clean and add a drop of oil. *Do not force or screw in tight.*

When talking, the mechanism of the mouthpiece should be in normal position. Place the lips as close to the mouthpiece as possible without actually contacting it. There is never any occasion for shouting. Speak as low as you please—the amplifying quality of our mouthpiece will carry your message over clearly.

When you are listening and have difficulty in hearing on account of noises around you, press the center mechanism or plunger gently as far as it will go. This will shut out all room noises and clarify your hearing. When ready to talk again release the pressure.

The porcelain barrel has been impregnated with our specially prepared antiseptic and deodorant fluid. When this is weakened by evaporation it may be renewed with a few drops of our own preparation or any antiseptic deodorant suitable to yourself.

For purposes of cleaning, the entire plunger may be removed by unscrewing and the glass wiped off with water or the same solution used in the porcelain barrel.

OUR GUARANTEE

ROEHRIG'S TELEPHONE AMPLIFIER IS GUARANTEED TO LEAVE OUR FACTORY IN PERFECT MECHANICAL CONDITION. ANY PARTS BROKEN IN USE CAN BE REPLACED. ASK YOUR LOCAL DISTRIBUTOR OR WRITE US DIRECT.

Specialties Manufacturing Co.

1843 SO. MAIN STREET

PHONE WESTMORE 0567 LOS ANGELES

A NEW SENSATION

In Telephony

"IT COVERS THE FIELD"



**A MOUTHPIECE
HAVING ALL THE
QUALITIES
Which Make Telephoning A Comfort**

MANUFACTURED BY
SPECIALTIES MFG. CO.
1843 S. Main St. Phone WE-0567
LOS ANGELES CALIFORNIA

**Now
AMPLIPHONE
Price \$2.00**

TEAR OUT ON THIS LINE

Date.....192.....

SPECIALTIES MANUFACTURING CO.,

1843 South Main Street,

Los Angeles, California.

Gentlemen:—


Please deliver to the address below.....of your Roehrig Telephone Amplifiers.

Do you wish a
Demonstration.....

.....
.....

AT LAST!—A Real Telephone Transmitter

*Something
New*

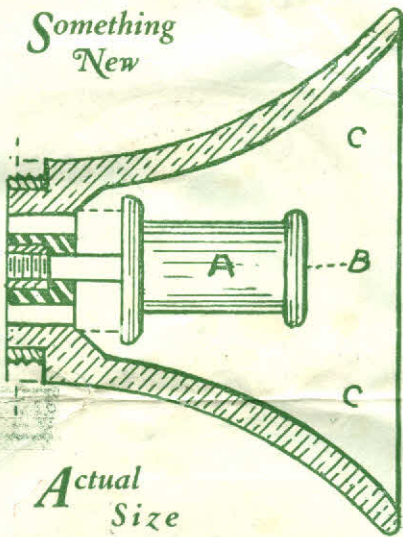

*Actual
Size*

—A self-contained unit in a telephone mouth-piece that embodies all of the improved principles in a thoroughly antiseptic device that amplifies the voice, enabling the speaker to use low, modulated tones. Clarifies reception under all conditions by the total elimination of side noises, room disturbances and extraneous sounds.

It Eliminates All Troublesome Side Noises

by merely depressing the plunger (A) which absolutely seals the transmitter opening against any and all room or street noises—giving a clear wire for perfect reception.

It Amplifies the Voice—Every Phone Made Private

The acoustic values of this little device have been a revelation to its users. It will carry true tones as low as one can articulate.

It Can Be Kept Clean—Antiseptic and Deodorant

The bowl of the mouth-piece (C) is made of heavy glass and easily cleaned. The (A) part of the plunger (B) is made of porous porcelain so that it may be saturated with liquid antiseptic and deodorant, thus saving a service charge.

A Partial List of Los Angeles Users:

Acme Fast Freight
Alemite Lubricator Co.
American Can Co.
American Manganese Steel Co.
Austin-Western Road Machinery Co.
Baldwin Motor Co.
Bank of America
Bank of Italy
Biltmore Hotel
Calavo Growers of California
Chase Brass & Copper Co.
Commercial Iron Works
Community Motor Sales, Inc.
Dollar Steamship Lines
Drive Urself Service
Ducommun Corporation
EmSCO Refractories Co.
L. A. First National Trust & Savings Bank

Fox Organization (Executive)
Gelfand Manufacturing Co.
General Petroleum Co.
Graham Paige Co.
Hutton & Co. (Stock Exchange)
Magnetic Signal Co.
The May Company
Morton Organ Co.
Murphy In A Door Bed Agency
Richfield Oil Co.
Security Trust & Savings Bank
C. C. Streeter & Co.
Texas Co.
W. I. Tupman (Fords)
Van Camp Sea Food Co.
West Coast Theaters
Western Wholesale Drug
Willard Storage Battery Co.